

## Intellitec System

Intrigue 530

Effective: 12070

Revised: 3-21-06\_Rev. 1

## Quick Guide

# Intellitec<sup>®</sup> System



### Before You Begin...

Reversed text is used in the following to indicate button presses on the IntelliTec switch panels, such as that shown on the left. For example, **bay lock**. All button presses are momentary unless otherwise stated.

Switch panel backlighting (when turned on) is green, but will turn orange while a button is pressed. Switches for dimmable lights will remain orange while the lights are turned on.

Most switches are intuitive in operation and are not covered in this document. For example, pressing the **bay lock** button will lock the bay doors.

## Intellitec Switch Functions

### Dimmable Ceiling Lights:

- 1 Press **\*\*\* lights** to turn the respective lights on and off.
- 2 Press and hold **\*\*\* lights** until the lights reach desired level of brightness, then release.
- 3 Lights will continuously cycle through all brightness levels while switch is pressed.
- 4 Release switch at any time then press and hold again to change direction of dimming action.
- 5 Lights will turn on to the brightness level that was selected when last turned off.

### Generator:

#### To Start

- Press and hold **gen start** until generator starts then release.

#### To Stop

- Press and hold **gen stop** until generator stops then release.

### Switch Panel Backlighting:

- 1 Press **all off** to turn switch panel backlighting on or off.
- 2 Switch panel backlighting may be difficult to see in strong daylight.

### Front A/C on Inverter (Option):

- 1 Press **a/c on invert** to enable the front roof air conditioner to run on inverter power. (Engine must be running.)



COUNTRY COACH

www.CountryCoach.com

## Intellitec System

Intrigue 530

### Security Camera:

- 1 Press **camera** to alternate between rear and side view cameras.

### Intellitec System Power:

- 1 Press and hold **all off** for four seconds to power-off the Intellitec system. Repeat to power-on.

## Important Notes

### Should problems occur...

- 1 Verify your understanding of the affected circuit. For example, the rear sconce lights in the bedroom are disabled when the bed is raised (optional bed lift only).
- 2 Verify that the domestic batteries have sufficient charge.
- 3 If a light fails to work, verify the bulb has not failed.
- 4 Check the fuse. All Intellitec controlled functions are fused at the Intellitec modules. These modules are located in the general locality of the affected circuit. For example, if the bedroom ceiling lights will not turn on, check the fuse on the Intellitec module located in the wardrobe.
- 5 Reset the system by turning off the domestic battery disconnect switch for one minute, then turn it back on.
- 6 In the unlikely event of abnormal system operation following heavily discharged domestic batteries, turn off the domestic battery disconnect switch for at least one minute. Then turn it back on only when a charge has been established to the battery bank.

### System Bypass Switches:

- 1 Two system bypass switches are located in the wardrobe for living room and bedroom ceiling lights.
- 1 A bypass switch for the water pump is located in the plumbing bay.

### Intellitec Module Locations:

#### Electrical Bay

- Located on the driver side wall of the Electrical Bay.
- Controls 'below the floor' Intellitec-switched circuits such as generator, water pump, and curb lights. Also controls living room mood lights and provides fused power for the SilverLeaf Total Coach System.

#### Drivers Overhead Cabinet

- Located above the driver seat in overhead cabinet.
- Controls bay door locks, security camera selection, passenger visor, step cover and porch light.



## Intellitec System

Intrigue 530

### **Wardrobe**

- Located in the bedroom wardrobe.
- Controls Intellitec-switched circuits in the bedroom area and all main ceiling lights.

### **A – Slide (B-Slide on JB Floor plan)**

- Located in the bottom rear of the dinette wall module on the driver side rear slide room.
- Controls Intellitec-switched circuits in the driver side front slide-room.

### **B – Slide (A-Slide on JB Floor plan)**

- Located in the rear living room overhead cabinet of the passenger side front slide room.
- Controls Intellitec-switched circuits in the passenger side front slide-room.

### **D - Slide**

- Located in the front overhead cabinet of the driver side rear slide-room.
- Controls Intellitec-switched circuits in the driver side rear slide-room.

