

Circuit Switching System

Before You Begin...

Switch panel backlighting (when turned on) is green, but turns orange while a switch is pressed. Switches for On/Off and dimmable circuits remain orange while the circuits are turned on.

Most switches are intuitive in operation and are not covered in this document. For example, pressing the **BAY LOCK** switch locks the bay doors.

Intellitec Switch Functions

Dimmable Ceiling Lights:

- Press ***** LIGHTS** to turn the respective lights on and off.
- Press and hold ***** LIGHTS** until the lights reach the preferred level of brightness, then release the switch.
- Lights continuously cycle through all brightness levels while the switch is pressed.
- Release the switch at any time and then press and hold it again to change between dimming and brightening.
- Lights turn on to the selected brightness level when they were last turned off.

Generator:

To Start

- Press and hold **GEN START** until the generator starts, then release.

To Stop

- Press and hold **GEN STOP** until the generator stops, then release.

Switch Panel Backlighting:

- Press **ALL OFF** to turn switch panel backlighting on or off.
- Switch panel backlighting may be difficult to see in strong daylight.

QUICK GUIDES

2007 Allure 400 Series, Intrigue 530

Effective: All 2007 coaches

Revised: 8-16-06



Front A/C on Inverter (Option):

- Press **A/C ON INVERT** to enable the front roof air conditioner to run on inverter power. (The engine must be running.)

Security Camera:

- Press **CAMERA** to alternate between rear- and side-view cameras.

Intellitec System Power:

- Press and hold **ALL OFF** for 4 seconds to power-off the Intellitec system.

Important Notes

Should problems occur...

- Verify your understanding of the affected circuit. For example, the rear sconce lights in the bedroom are disabled when the bed is raised (optional bed lift only).
- Verify that the domestic batteries have sufficient charge.
- If a light fails to work, verify whether the bulb has failed.
- Check the fuse. All Intellitec system-controlled functions are fused at the Intellitec modules. These modules are located in the general locality of the affected circuit. For example, if the bedroom ceiling lights does not turn on, check the fuse on the Intellitec module located in the wardrobe.
- Reset the system by turning off the domestic battery disconnect switch for one minute, and then turn it back on.
- In the unlikely event of abnormal system operation following heavily discharged domestic batteries, turn off the domestic battery disconnect switch for at least one minute. Then turn it back on only when the batteries have been recharged.

System Bypass Switches:

- Two system bypass switches are located in the wardrobe for living room and bedroom ceiling lights.
- A bypass switch for the water pump is located in the plumbing bay.

Intellitec Module Locations:

Electrical Bay

- On the driver-side wall of the Electrical Bay.
- Controls below-the-floor Intellitec system-switched circuits such as generator, water pump, and curb lights. Also controls living room mood lights and provides fused power for the SilverLeaf Total Coach System.

Drivers Overhead Cabinet

- Above the driver seat in the overhead cabinet.
- Controls bay door locks, security camera selection, passenger visor, step cover, and porch light.

Wardrobe

- In the bedroom wardrobe.
- Controls Intellitec system-switched circuits in the bedroom and all main ceiling lights.

A-Slide (B-Slide on JB Floor plan)

- In the bottom rear of the dinette wall module on the driver-side rear slide room.
- Controls Intellitec system-switched circuits in the driver-side front slide room.

B-Slide (A-Slide on JB Floor plan)

- In the rear living room overhead cabinet of the passenger-side front slide room.
- Controls Intellitec system-switched circuits in the passenger-side front slide room.

D-Slide

- In the front overhead cabinet of the driver-side rear slide room.
- Controls Intellitec system-switched circuits in the driver-side rear slide room.

